

Instructions for USED OIL FUEL TANK WARNING LABEL

Applies to: Used Oil Models RA,
RAD, RAB, and RV

◀◀ **IMPORTANT** ▶▶

Instructions for Attaching Used-Oil Storage Tank Warning Label, P/N 121603

(Label is in the Owner's Literature Envelope for installation by the installer.)

To prevent unwanted and potentially dangerous liquids from being added to the used-oil storage tank, a warning label is provided with this new Model RA, RAD, or RV used-oil fired unit heater or Model RAB used-oil fired boiler.



The label **MUST** be affixed by the installer to the used-oil storage tank in accordance with the following instructions:

1) Select a location for the Warning Label - *The warning label must be readily visible to the person filling the tank.* (Do not select a horizontal surface where spilled oil may accumulate.)

If fuel is poured directly into the tank, select a label location as close as possible to the fill opening. (NOTE: If installing a Reznor Model OT-250 storage tank, the tank should be factory-equipped with this warning label. The enclosed label may also be affixed to the tank or may be discarded.)

If an auxiliary transfer pump or piping is used to convey oil to the tank from another area, select a label location at the point where the fuel is ***first introduced*** to the system.

2) Affix the Label - At the selected location, clean and dry the surface, being sure it is free of any oil residue. Remove the backing and adhere the warning label.

3) IMPORTANT - Make sure that the owner and all persons responsible for adding fuel to the tank are aware of the warning.

www.ReznorHeaters.com

1-800-695-1901

©2014 Reznor, LLC. All rights reserved.

Trademark Note: Reznor® is registered in the United States and other countries.
0514 Form I-UO WL (Version 0.2)

P/N 122997R2