


MODELS RA/RAD

INDOOR, OIL-FIRED, BLOWER AND FAN-TYPE USED OIL UNIT HEATERS FOR COMMERCIAL/INDUSTRIAL USE



**Model
RA235**

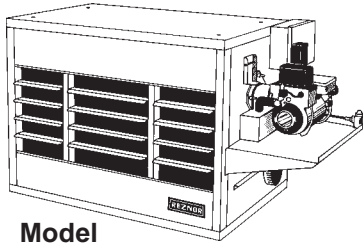

**Reznor® Used Oil
Heaters are CSA
certified and meet all
EPA requirements.**

NOTE: Used oil heaters are not approved for sale in the state of California.

DESCRIPTION

Reznor® Model RA/RAD Series Used Oil Unit Heaters are available in four sizes with BTUH inputs from 140,000 to 500,000 with either a propeller fan or blower for air delivery. These oil-fired heaters are designed to burn used oil but will also burn No. 2 fuel oil. The used oil must be no heavier than 50 weight and not lighter than No. 2 fuel oil.

Model RA is a fan-type unit heater with a propeller fan designed for air delivery to open areas. Model RAD is a blower-type unit heater with a centrifugal blower and adjustable belt drive. All blower-type Model RAD heaters may be connected to ductwork and are capable of handling up to .25" w.c. of external static pressure. Size RAD500 will handle up to .5" w.c. of external static pressure. All units are equipped with either a full fan guard or blower and belt guards.

Model RA/RAD units feature a low-stress heat exchanger and a heavy gauge combustion chamber with large, easily accessible service panels. The air atomizing burner provides excellent flame retention. Air for atomization of the oil is provided by an onboard piston-type compressor. An oil preheating system (U.S. Patent No. 5,080,579) heats the oil, maintaining it at a temperature required for atomization but preventing nozzle after-drip. The burner has electric spark ignition and an electronic cad-cell flame safety system with manual reset. The fan control prevents cold air discharge at start-up and provides continued warm air while the unit is hot after burner shutdown. The safety limit control protects the heater from high temperatures caused by an airflow restriction or motor failure. Size 140, 235 and 350 heaters require a 115 volt, 60 Hz power supply. A Size 500 heater requires a 230 volt, 60 Hz power supply. A 24-volt thermostat is supplied with each heater.

The remote fuel pump mounted on or near the oil supply tank is part of a unique positive pressure supply system providing a precisely metered flow of oil to the heater. This positive displacement pump produces a stable flame under a wide range of operating parameters. The supply tank must be no closer than 5 ft and no farther than 50 ft from

the heater. It is recommended that used oil be at a temperature of 50°F or above when it enters the pump. A fuel line filter, with a disposable strainer and vacuum gauge, and a foot valve are provided for installation in the field-supplied suction line that runs from the supply tank to the fuel pump.

Reznor® used oil unit heaters are engineered to facilitate installation and required maintenance procedures.

Model RA and RAD unit heaters are CSA certified and meet EPA requirements for disposal of used oil.

STANDARD FEATURES

- Automatic, thermostat controlled operation
- 10-year combustion chamber/heat exchanger limited warranty
- Remote pump system provides a metered flow of fuel
- Oil preheating system (U.S. Patent No. 5,080,579)
- Air atomizing burner
- Electric spark ignition with electronic cad-cell flame safety system
- Piston air compressor with replaceable filter
- Fan and limit controls
- High temperature limit control
- Terminal block wiring
- Built-in disconnect switches (pump and heater)
- Permanently lubricated fan or blower motor with internal overload protection
- Operation hour meter
- 24-volt thermostat
- Barometric draft regulator
- Backflow sensor
- Flexible fuel line and built-in tray for service to the burner and nozzle (without disconnecting the fuel line)
- Large, easily accessible service panels designed to facilitate combustion chamber/heat exchanger maintenance
- Observation and overfire draft sampling ports
- Supply line filter system with a disposable strainer and dirty filter indicator gauge
- Individually adjustable horizontal louvers
- Full safety fan guard or blower inlet and belt guards
- Baked-on enamel finish
- 4-point threaded hanger connectors

OPTIONAL FEATURES - Factory Installed


- High altitude operation

ACCESSORIES - Field Installed

- Vertical louvers (Sizes 140, 235 and 350)
- High altitude conversion kits (Sizes 235 and 350)
- 250-gallon workbench oil tank with or without heater stand (stand available for RA 140 and 235 only)
- Hanger Kit
- Vent cap


TECHNICAL DATA	Model RA (Fan-Type Unit Heater)				Model RAD (Blower-Type Unit Heater)			
	140	235	350	500	140	235	350	500
Size								
BTUH Input	140,000	235,000	350,000	500,000	140,000	235,000	350,000	500,000
BTUH Thermal Output	112,000	188,000	275,000	400,000	112,000	188,000	275,000	400,000
Nozzle Input (GPH)	1.0	1.7	2.5	3.57	1.0	1.7	2.5	3.57
Motor RPM	1050	850	850	1050	1750	1750	1725	1725
Motor HP	1/8	1/4	(2) 1/4	(2) 3/4	3/4	3/4	1-1/2	3
AMPS Full Load	115V-13	115V-14	115V-22	230V-17	115V-14	115V-24	115V-29	230V-20
CFM (free air)	2000	3200	5000	6400	2000	3200	5000	6400
CFM .25" ESP - RAD only	--	--	--	--	1425	2140	3500	5900
CFM .5" ESP - RAD500 only	--	--	--	--	--	--	--	5600
Air Throw (9-ft suspension)	50ft (15M)	65ft (20M)	80ft (24M)	90ft (27M)	50ft (15M)	65ft (20M)	80ft (24M)	90ft (27M)
Fan Ø /Pitch & Blower Size	18-33°	22-36°	(2)22-36°	(2)24-34°	12-9	15-11	(2)15-11	(2)15-11
Flue Size (inches)	8	8	8	10	8	8	8	10
Approximate Net Wt (lbs)	290	343	525	750	352	410	650	850
Approximate Shipping Wt (lbs)	340	405	685	925	417	495	810	1025

DIMENSIONS
- inches (mm)

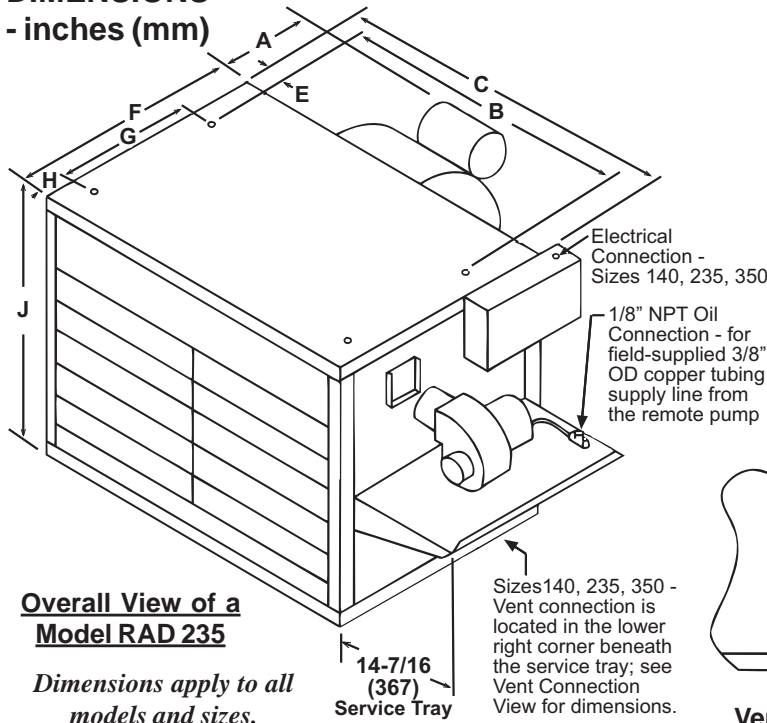


Overall View of a Model RAD 235

Dimensions apply to all models and sizes.

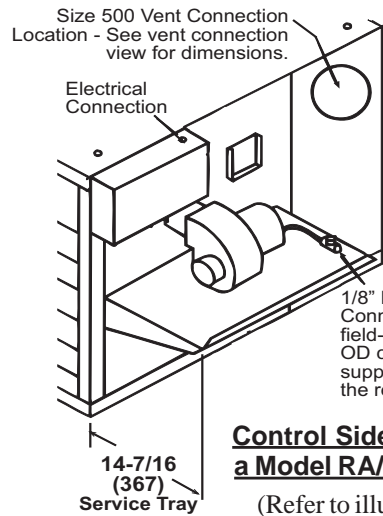


Control Side View of a Model RA/RAD 500

(Refer to illustration above for dimensions.)

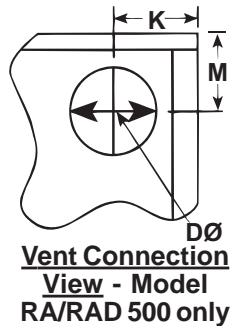

Vent Connection View - Model RA/RAD 500 only

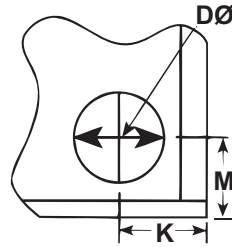

Vent Connection View - Model RA/RAD Sizes 140, 235, 350

Size	140	235	350	500
A-RA	8 (203)	9-1/2 (241)	11 (279)	10 (254)
A-RAD	18-11/16 (221)	22 (559)	23 (584)	23 (584)
B	27-3/8 (695)	37-3/8 (949)	38 (965)	44 (1118)
C	33 (838)	43 (1092)	58-3/8 (1483)	61-5/16 (1557)
D	8 (203)	8 (203)	8 (203)	10 (254)
E	2-9/16 (65)	2-9/16 (65)	12-1/2 (318)	11-3/8 (289)
F	29-1/16 (738)	29-1/16 (738)	34-1/4 (870)	51 (1295)
G	17 (432)	17 (432)	16-1/2 (419)	37-1/2 (953)
H	4-7/32 (107)	4-7/32 (107)	7-1/4 (184)	6-1/4 (159)
J	32-1/8 (816)	32-1/8 (816)	41-3/8 (1051)	34-3/8 (873)
K	7-19/32 (193)	7-19/32 (193)	12-1/2 (318)	12-3/16 (310)
M	7 (178)	7 (178)	9-1/2 (241)	8-3/8 (213)

Model RAD Discharge Duct Opening Dimensions - inches (mm)

Size	Width	Height
140	30 (762)	16-1/4 (413)
235	40 (1016)	16-1/4 (413)
350	54 (1372)	24-1/4 (616)
500	57-5/16 (1456)	20-7/16 (519)

INSTALLATION NOTES:

A barometric draft regulator is factory-supplied with all heaters. The draft regulator must be included in the installation.

An 18" clearance is required from the top of the draft regulator to a combustible ceiling.

CAUTION: These heaters are designed to provide economical disposal of used oil. Due to the nature of the fuel being burned, this unit should not be depended on as the only source of heat. Any water or foreign material in the oil may cause the unit to shutdown. A secondary source of heat should always be provided to the building. This will prevent any building damage if the used oil heater is to become inoperative during subfreezing weather.

Reference: For information about Reznor® Model OT-250 Workbench Fuel Tank, contact your distributor or check the Website (www.ReznorHeaters.com).

Clearances from Combustibles - inches (mm)	RA (Fan Models)				RAD (Blower Models)			
	140	235	350	500	140	235	350	500
Top	2 (51)	2 (51)	6 (152)	6 (152)	6 (152)	6 (152)	6 (152)	6 (152)
Front	48 (1219)	48 (1219)	48 (1219)	48 (1219)	48 (1219)	48 (1219)	48 (1219)	48 (1219)
Side (Burner)*	6 (152)	6 (152)	18 (457)	18 (457)	6 (152)	6 (152)	18 (457)	18 (457)
Side (Opposite Burner)*	6 (152)	6 (152)	18 (457)	18 (457)	6 (152)	6 (152)	18 (457)	18 (457)
Rear	24 (610)	24 (610)	24 (610)	24 (610)	6 (152)	6 (152)	6 (152)	6 (152)
Bottom	6 (152)	6 (152)	18 (457)	18 (457)	6 (152)	6 (152)	18 (457)	18 (457)
Flue Pipe	9 (229)	9 (229)	18 (457)	18 (457)	9 (229)	9 (229)	18 (457)	18 (457)

*Allow for service access.

(800) 695-1901 Press 2; www.ReznorHeaters.com